4. Block Diagram

4-1-1 MAIN (MAX-KD100/ MAX-KD110)

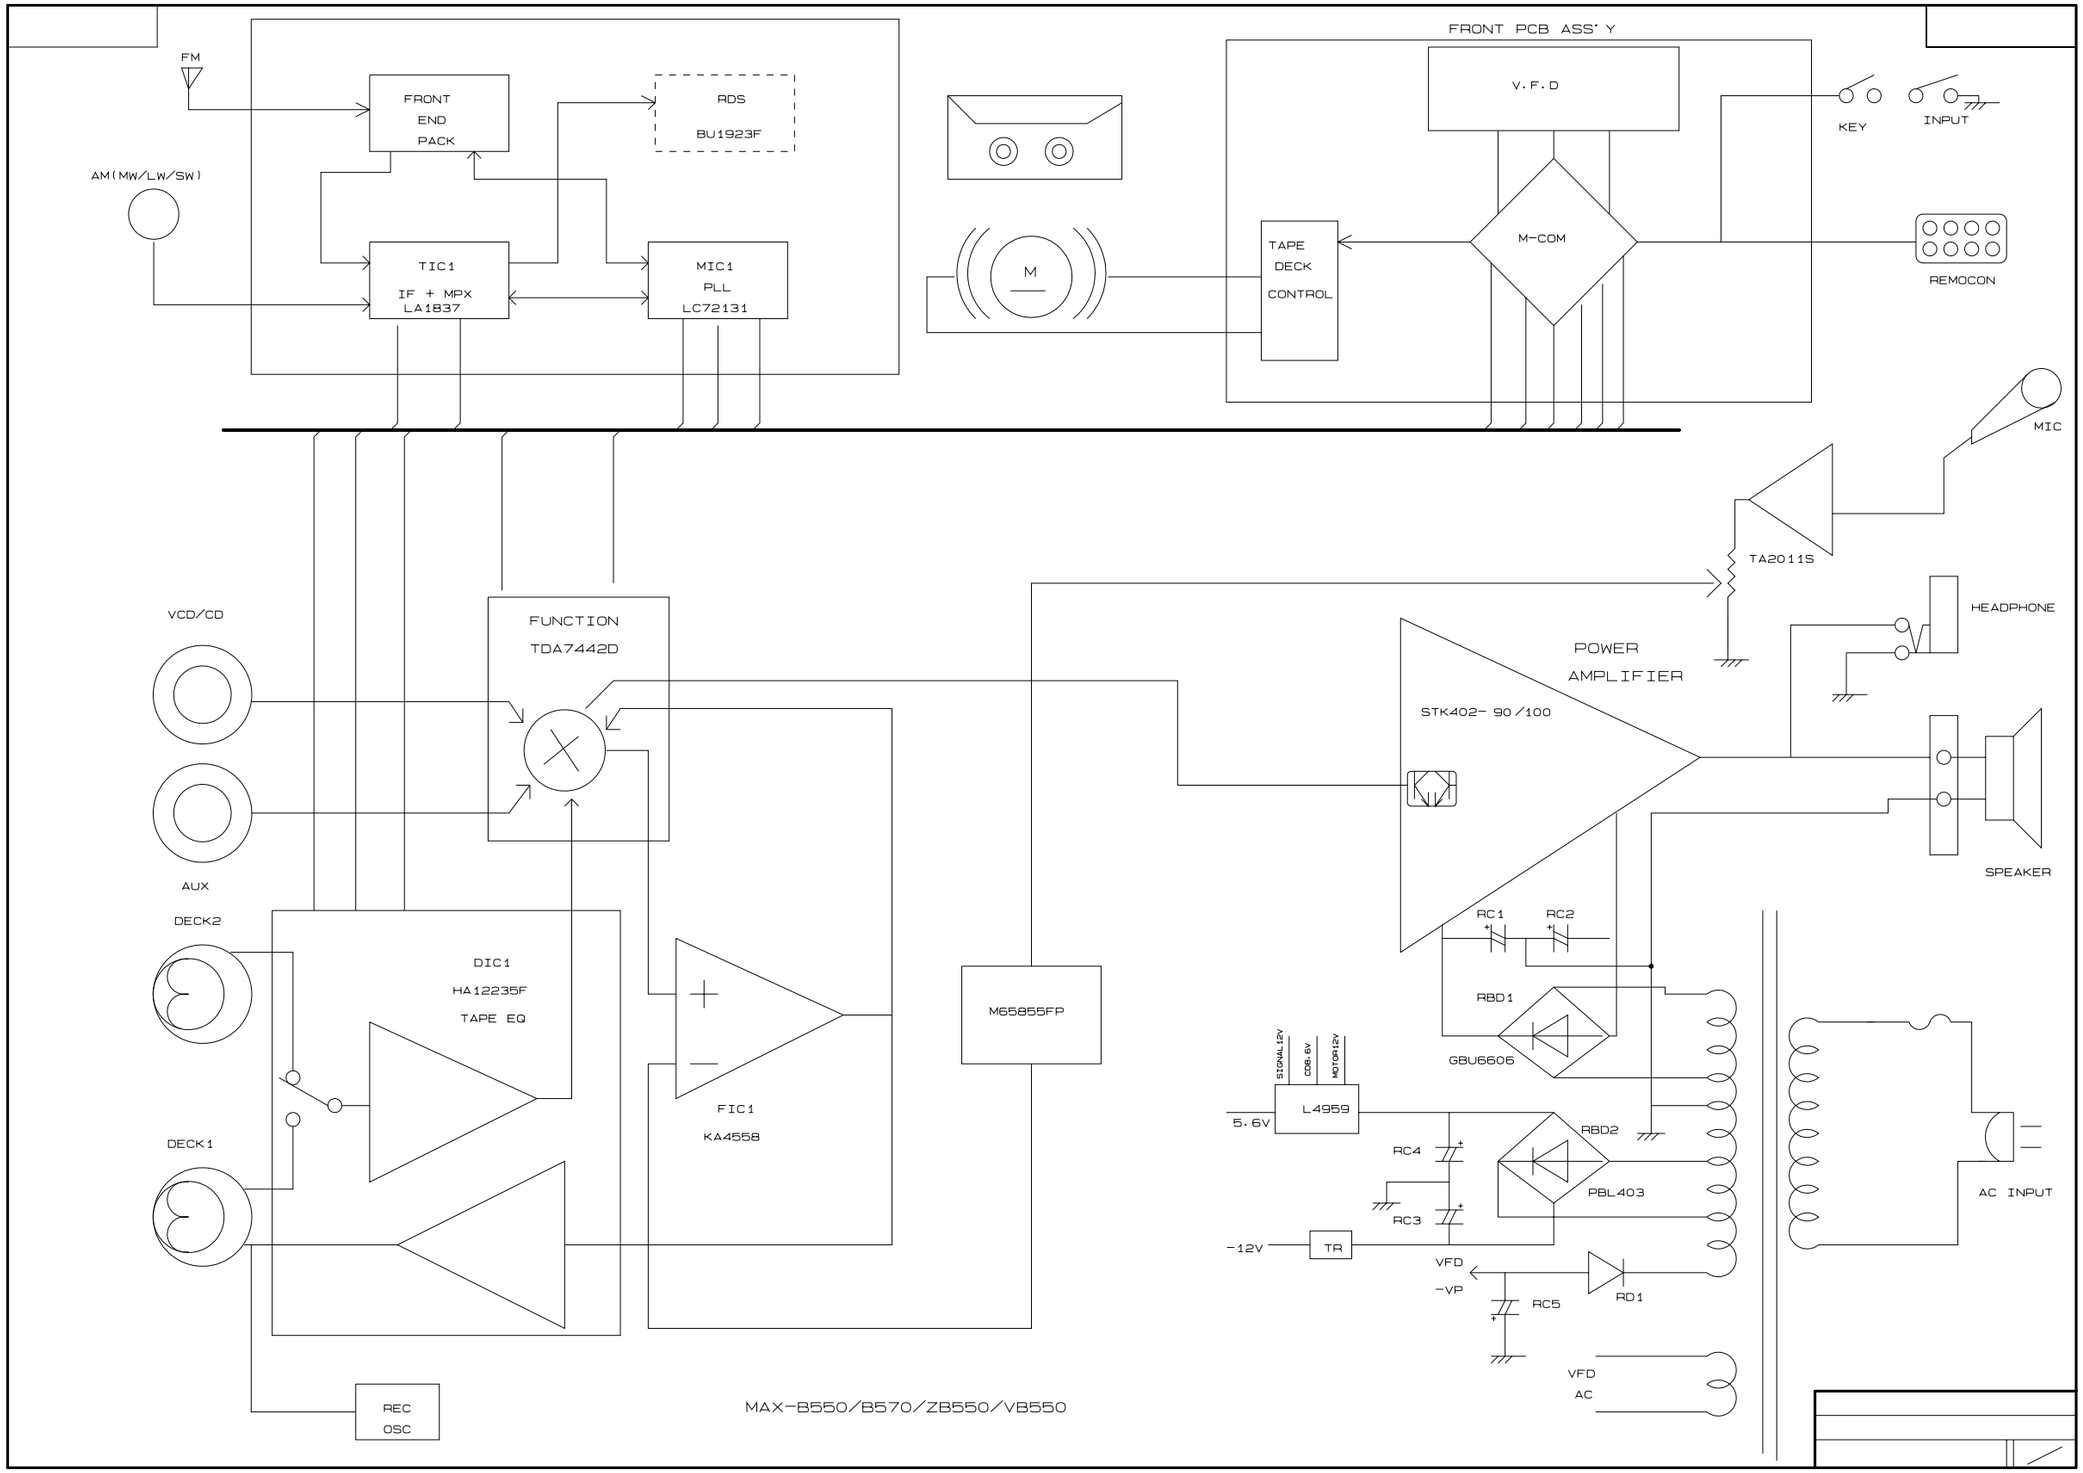

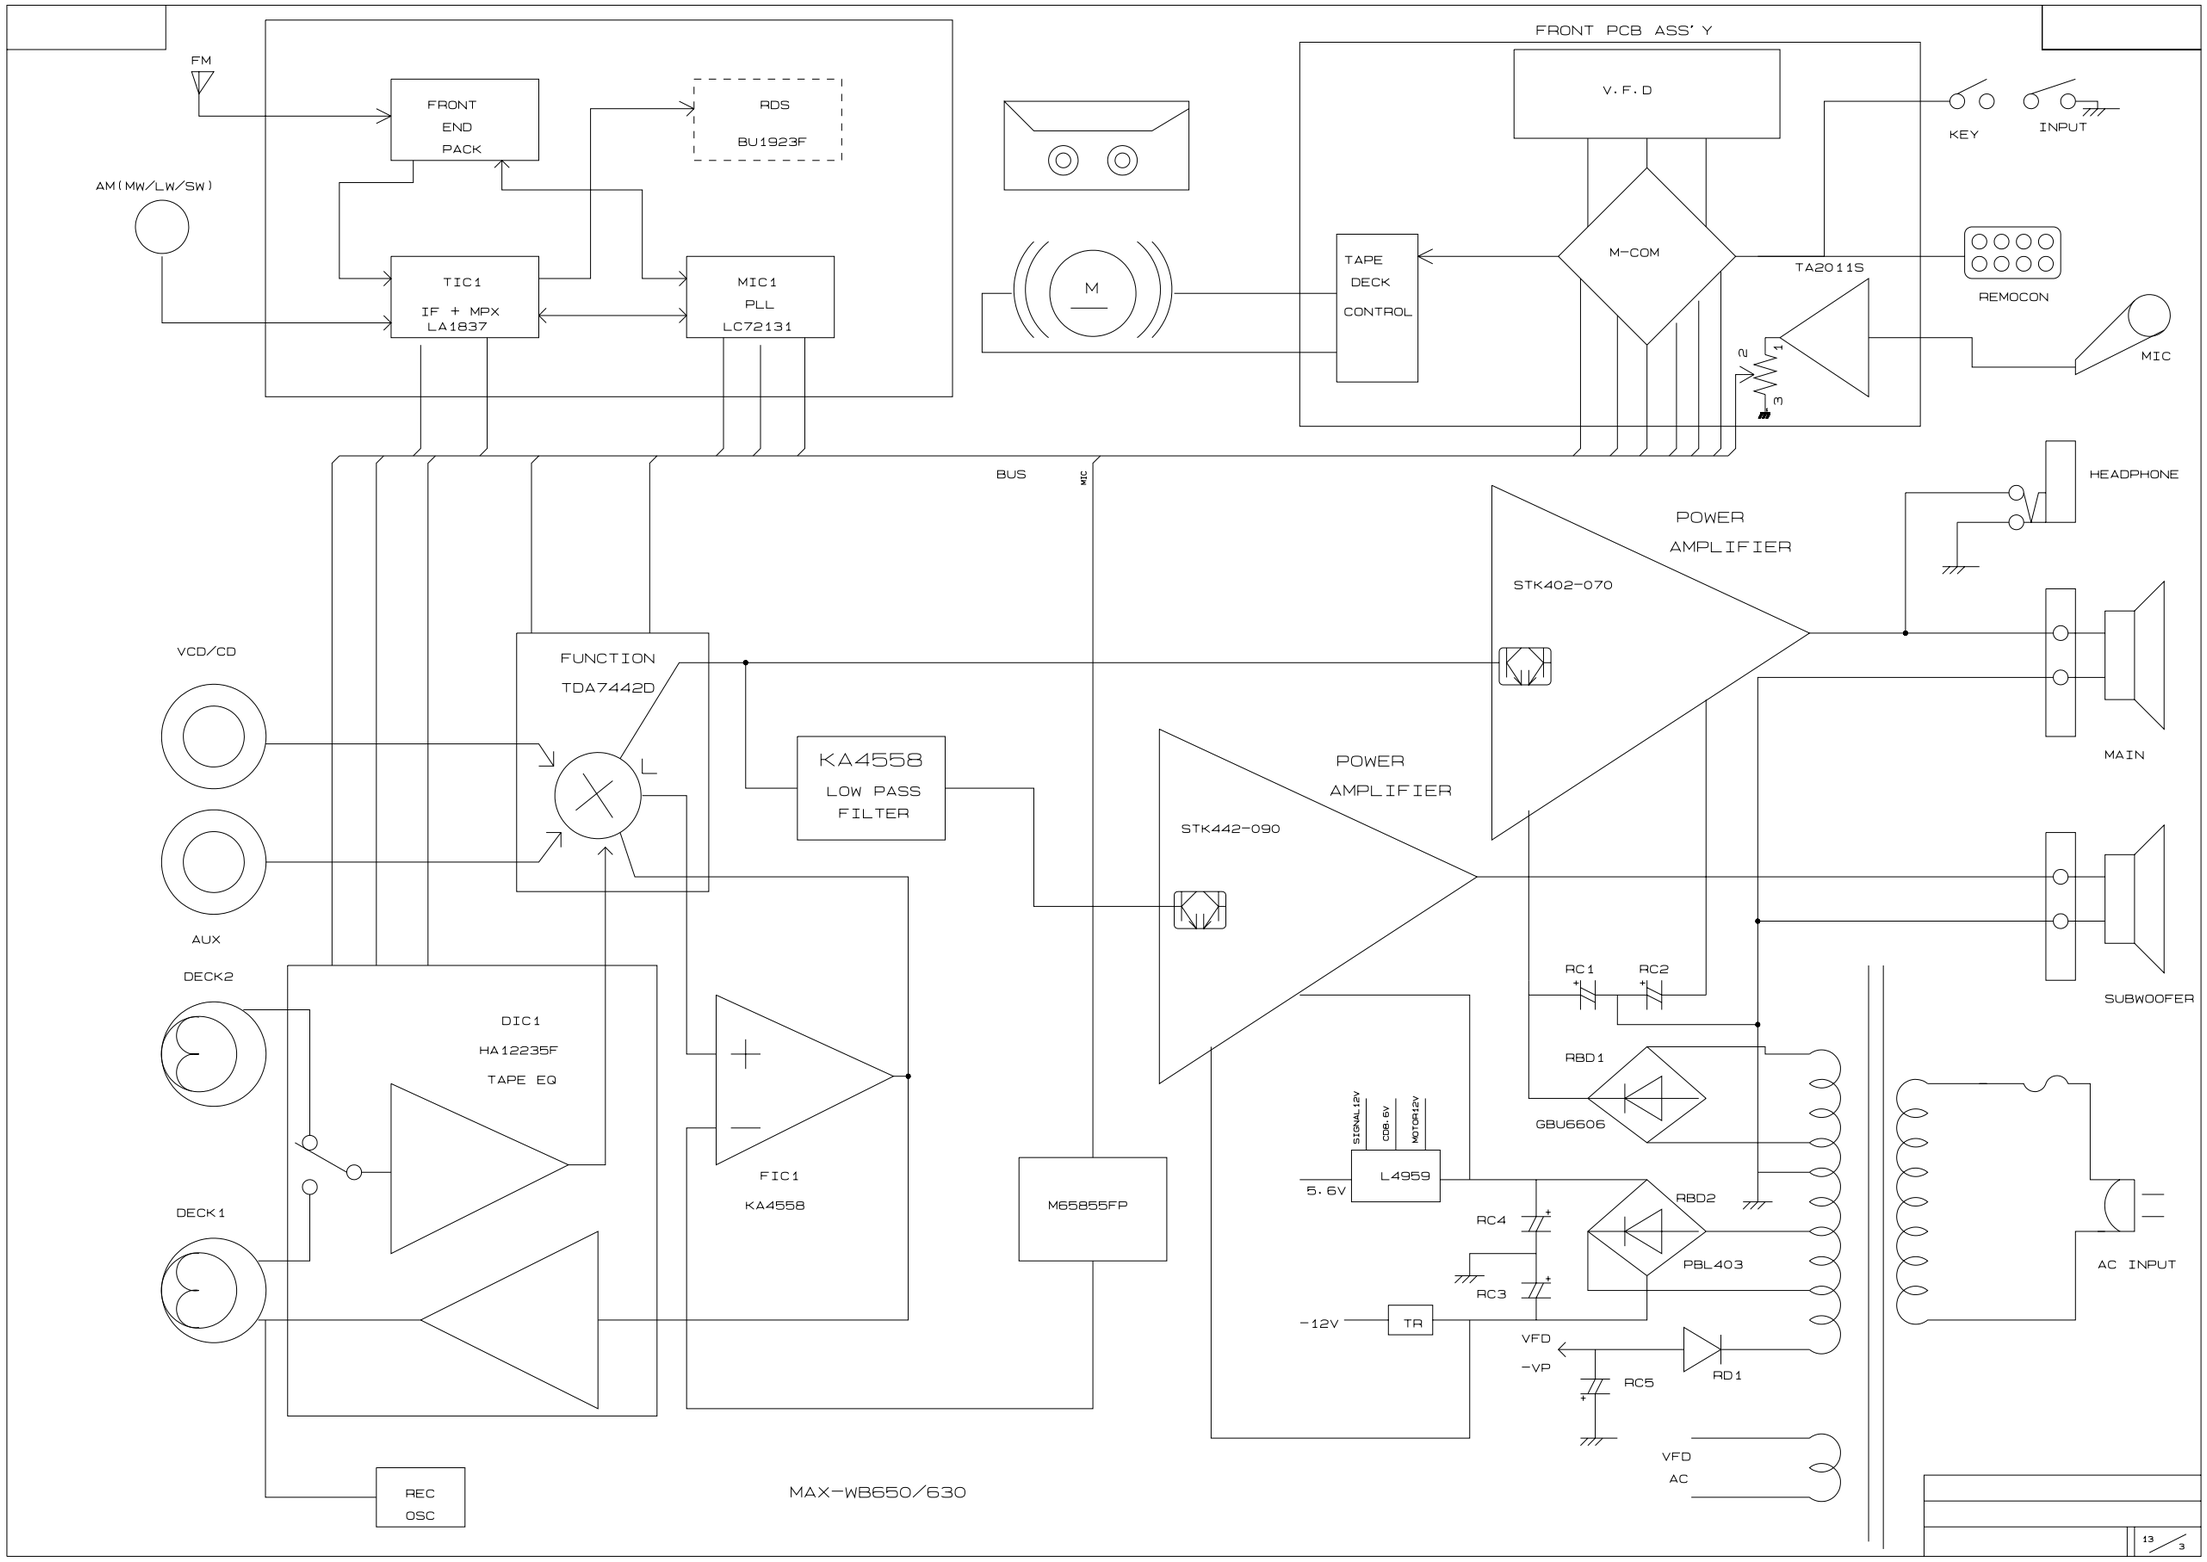
FRONT PCB ASS' Y
FM
AM(MW/LW/SW)
FRONT END PACK
RDS BU1923F
TIC1 IF + MPX LA1837
MIC1 PLL LC72131
M
TAPE DECK CONTROL
V.F.D
M-COM
TA2011S
KEY
INPUT
REMOCON
MIC
BUS
MIC
HEADPHONE
POWER AMPLIFIER
STK402-070
VCD/CD
FUNCTION TDA7442D
L
KA4558 LOW PASS FILTER
POWER AMPLIFIER
STK442-090
MAIN
SUBWOOFER
AUX
DECK2
DIC1 HA12235F TAPE EQ
FIC1 KA4558
M65855FP
RC1
RC2
RBD1
GBU6606
SIGNAL12V
CDB.6V
MOTOR12V
L4959
5.6V
RC4
RBD2
PBL403
RC3
-12V
TR
VFD
-VP
RC5
RD1
VFD AC
AC INPUT
DECK1
REC OSC
MAX-WB650/630
13/3
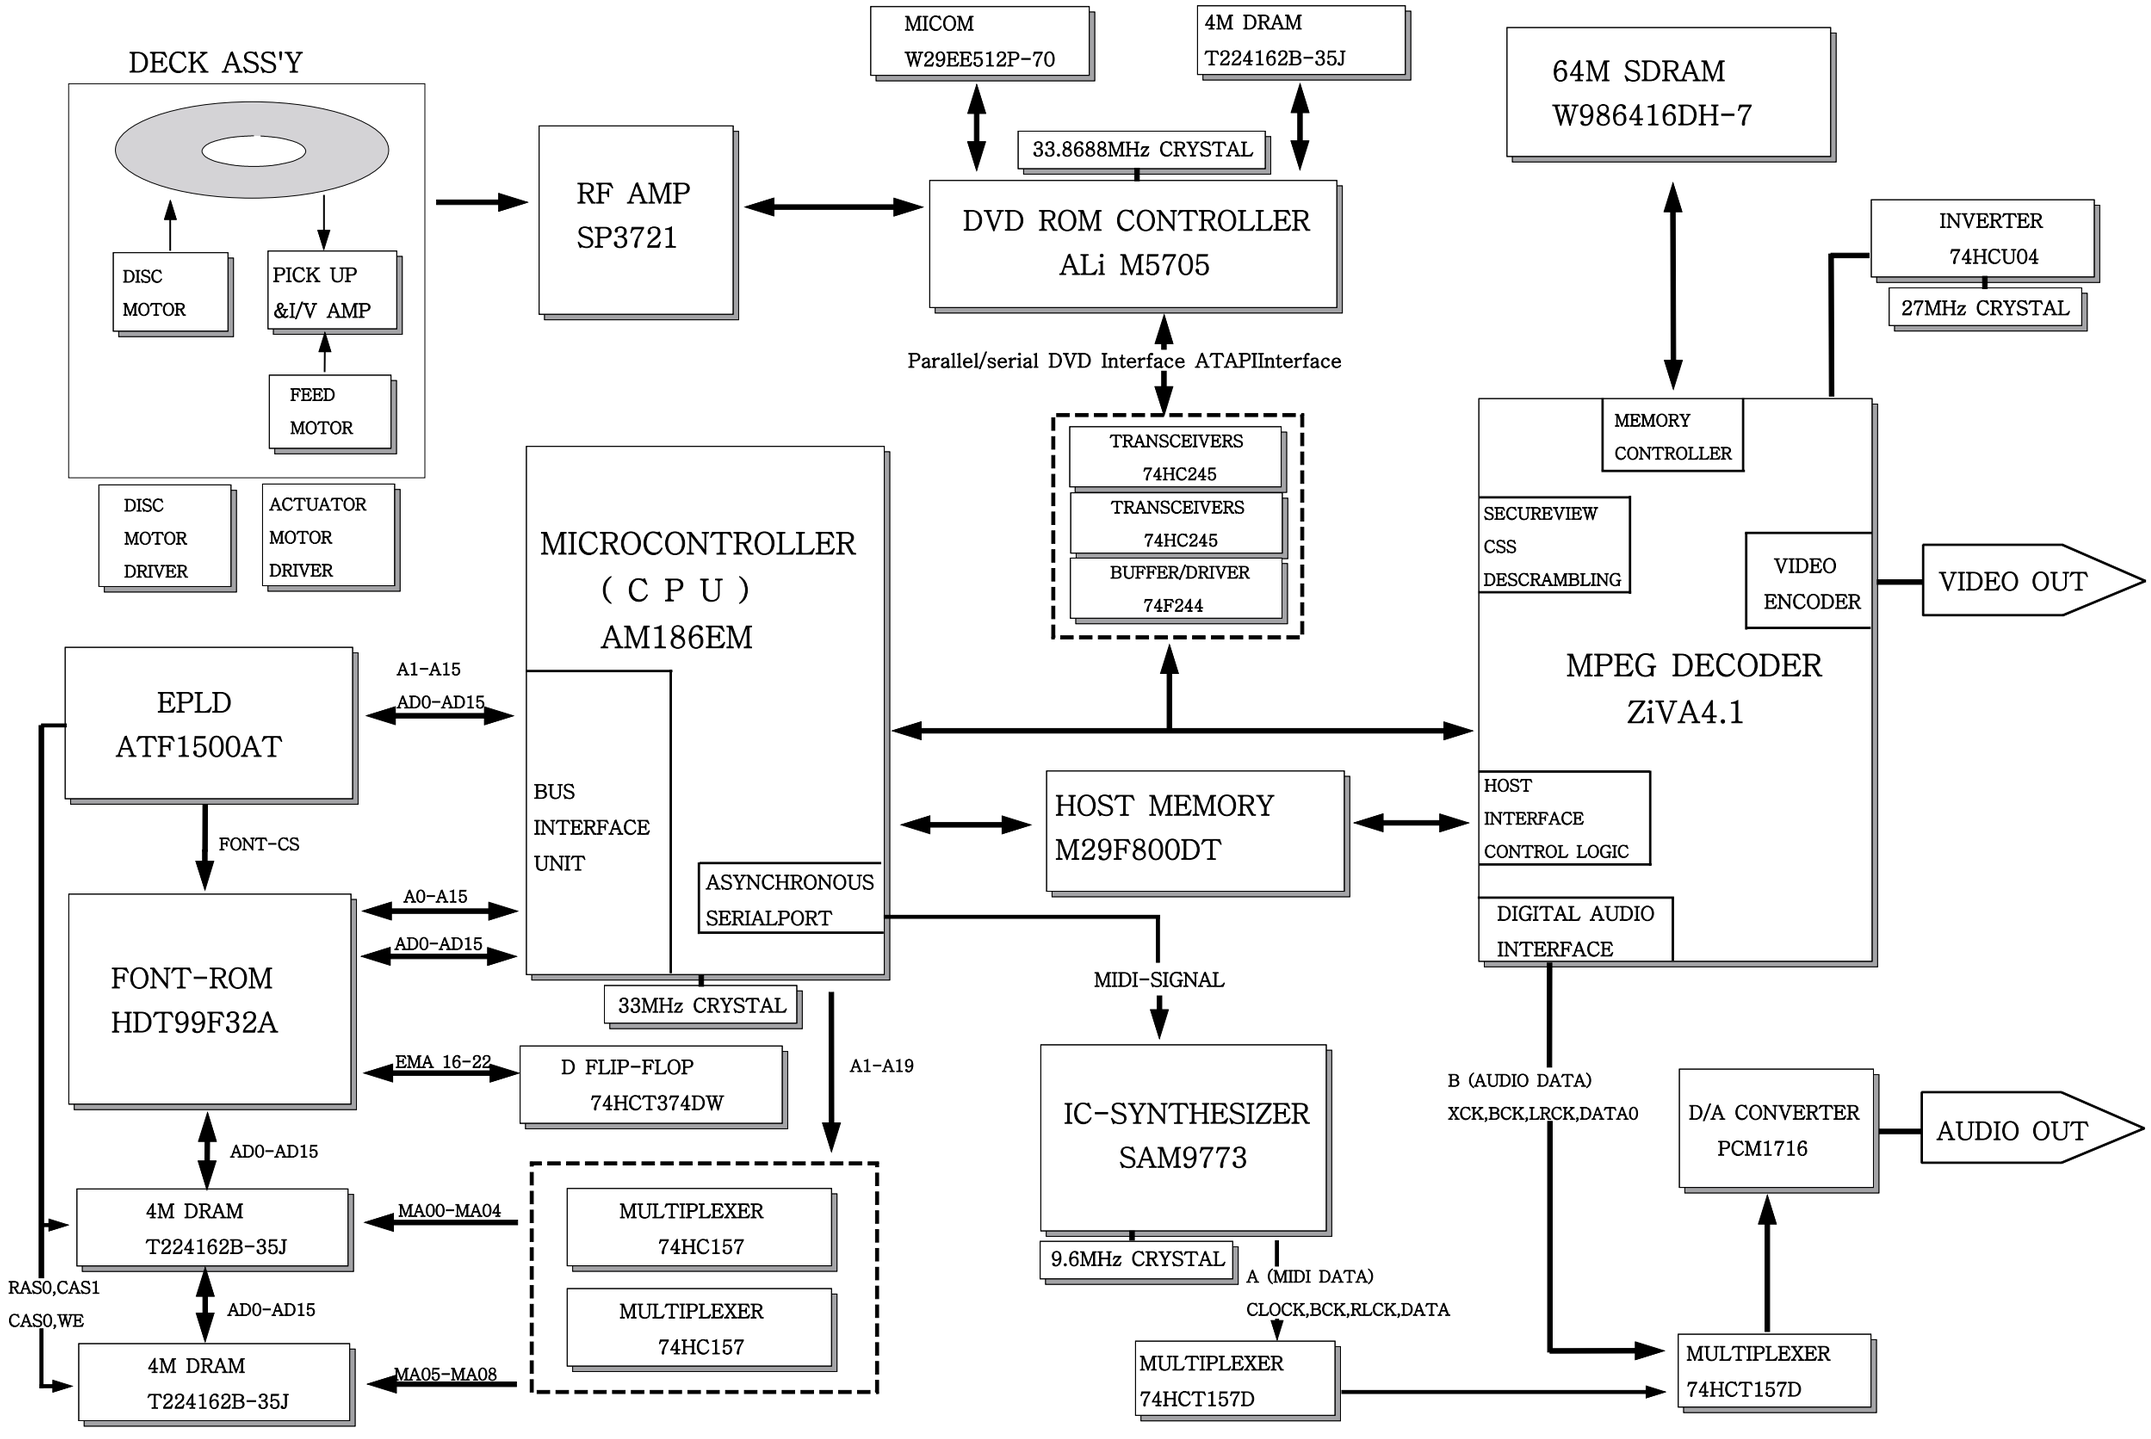
DVD KARAOKE BLOCK DIAGRAM